

Printing

Using color

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 1 Turn the printer *off*.
- 2 Unplug the high capacity feeder power cord from the electrical outlet.
- 3 Disconnect the interface cable from the side of the high capacity feeder.

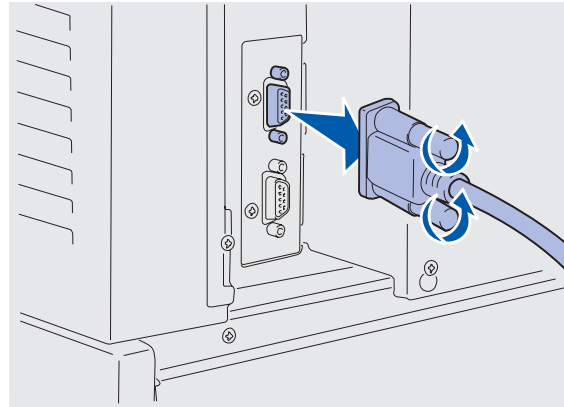

Printing

Using color

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 4 Roll the high capacity feeder away from the printer.
- 5 Remove the high capacity feeder from the guide rail.

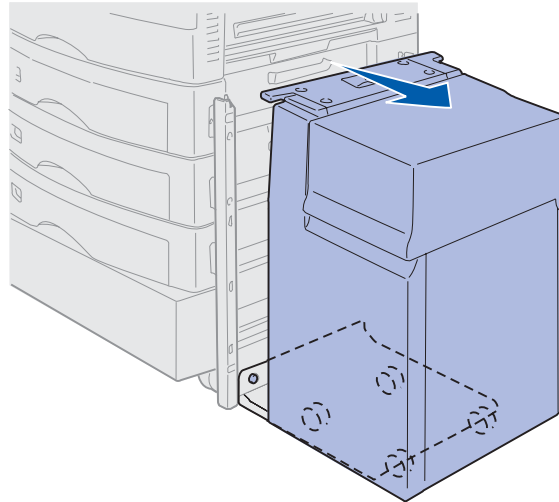

Printing

Using color

Paper handling


Maintenance

Troubleshooting

Administration

Index

6 Raise the guide rail and pull it away from the docking frame.

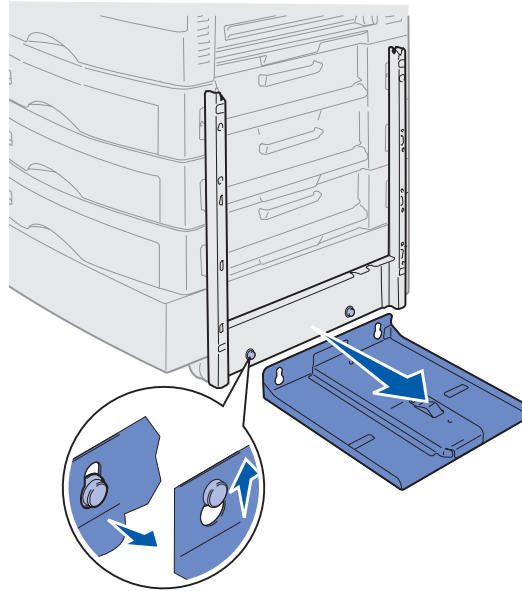

Printing

Using color

Paper handling


Maintenance

Troubleshooting

Administration

Index

7 Remove the wrench from the holder in the high capacity feeder.

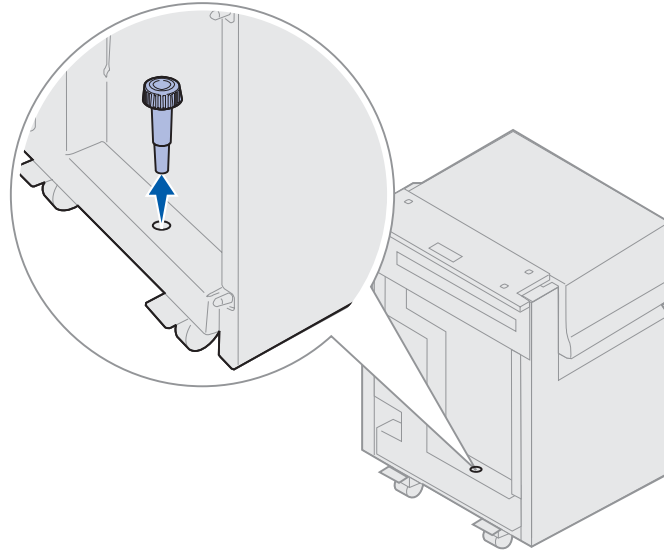

Printing

Using color

Paper handling


Maintenance

Troubleshooting

Administration

Index

- 8 Remove the four screws securing the docking frame.

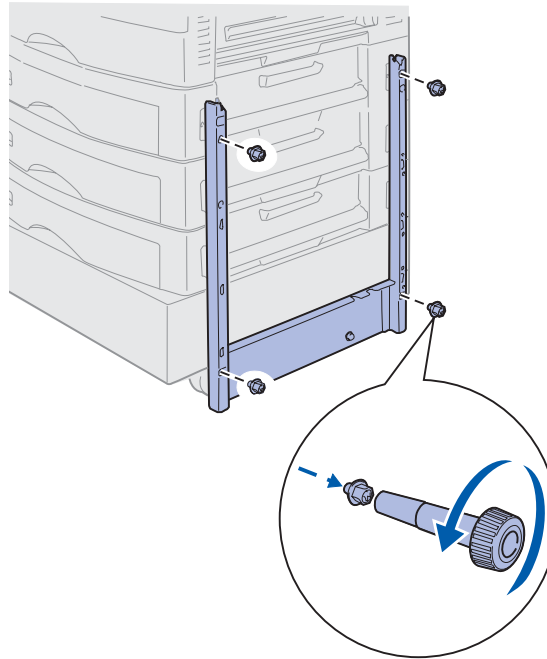

Printing

Using color

Paper handling

Maintenance

Troubleshooting

Administration

Index

- 9 Insert the two side covers into the screw holes on the optional drawer until they snap into place.

