

Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

When **Staples Low** or **Staples Empty** appears on the operator panel display, complete the steps to insert a new staple cartridge in the finisher. Refer to the illustrations inside the stapler access door for more information. For information about ordering staple cartridges, see [Ordering supplies](#).

Note: If Staple Alarm is set to Single, the printer stops printing and displays the **Load Staples** message. Install a new staple cartridge or press **Go** to clear the message and continue printing. If Staple Alarm is set to Continuous, the printer displays the **Load Staples** message and continues printing.

- 1 Open the stapler access door and remove the staple cartridge holder by pulling on the colored tab.

Note: A partial sheet of staples will remain in the staple cartridge holder when this message appears. Do not remove this sheet. Install a new staple cartridge to properly feed the partial sheet of staples.

- 2 Remove the empty staple cartridge.
- 3 Install the new staple cartridge.
- 4 Reinstall the staple cartridge holder and close the stapler access door.



Printing

Paper handling

Maintenance

Troubleshooting

Administration

Index

Priming Stapler appears on the display. Priming occurs automatically without creating any output, and ensures the stapler is functioning properly. ▲

