Supplies guide

The following table lists the part numbers for ordering supply items.

Ordering a toner cartridge

When a message appears on the printer display indicating which toner cartridge needs to be replaced, immediately order a new toner cartridge.

For information on replacing a toner cartridge, see the instruction sheet that came with the supply.

Estimated cartridge yield is based on the ISO / IEC 19798 standard (with about 5% coverage per color). Extremely low print coverage (less than 1.25% for a color) for extended periods of time may negatively affect actual yield for that color and may cause cartridge parts to fail prior to exhaustion of toner.

Recommended toner cartridges and part numbers

Part name	Lexmark Return Program Cartridge	Regular cartridge
Black High Yield Toner Cartridge	X746H1KG	X746H2KG
Yellow Toner Cartridge Yellow High Yield Toner Cartridge	X746A1YG X748H1YG	X746A2YG X748H2YG
Magenta Toner Cartridge Magenta High Yield Toner Cartridge	X746A1MG X748H1MG	X746A2MG X748H2MG
Cyan Toner Cartridge Cyan High Yield Toner Cartridge	X746A1CG X748H1CG	X746A2CG X748H2CG

Ordering a fuser or a transfer module

A message on the printer display appears when the fuser or transfer module needs to be replaced.

For information on replacing the fuser or transfer module, see the instruction sheet that came with the supply.

Recommended part numbers

Part name	Part number
Fuser	40X8112 (100 V)
	40X8110 (115 V)
	40X8111 (230 V)
Transfer module	40X8307

Ordering a waste toner bottle

A message on the printer display appears when the waste toner bottle needs to be replaced.

For information on replacing the waste toner bottle, see the instruction sheet that came with the supply.

Note: Waste toner bottle reuse is not recommended.

Recommended part number

Part name	Part number
Waste toner bottle	C734X77G

Ordering ADF replacement parts

Order ADF replacement parts if you experience problems with paper double-feeding or failing to feed through the ADF.

For information on replacing the ADF parts, see the instruction sheets that came with the parts.

Recommended part numbers

Part name	Part number
ADF pick assembly	40X5188
Separator pad	40X5187
ADF pick pad	40X5189

Ordering a photoconductor

A message will appear on the printer display when a photoconductor needs to be replaced.

For information on replacing a photoconductor, see the instruction sheet that came with the supply.

Recommended part numbers

Part name	Part number
Photoconductor	C734X20G
Photoconductor, Multi-Pack	C734X24G

Notes:

- All four photoconductors should be replaced at the same time.
- Reset the maintenance counter back to zero after installing the four new photoconductors.