



Menus and Messages

March 2005

www.lexmark.com

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

© 2005 Lexmark International, Inc.

All rights reserved.

740 West New Circle Road
Lexington, Kentucky 40550

Edition: March 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments about this publication may be addressed to Lexmark International, Inc., Department F95/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call +44 (0)8704 440 044. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Mac and the Mac logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

PCL® is a registered trademark of the Hewlett-Packard Company.

PostScript® is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

© 2005 Lexmark International, Inc.


All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Contents


Chapter 1: Using printer menus	4
Understanding the printer operator panel	5
Menu Groups	7
Paper Menu	7
Reports	13
Settings	15
Security	28
Network/Ports	29
Help	38
Chapter 2: Understanding printer messages	39
Index	49

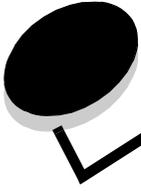

Using printer menus

A number of menus are available to make it easy for you to change printer settings. The diagram shows the menu index on the operator panel, the menus, and items available under each menu. The items in each menu and the values you can select are described in more detail later in this chapter.

Some menu items or values are displayed only if a specific option is installed on the printer. Other menu items may only be effective for a particular printer language. You can select these values at any time, but they only affect printer function when you have the optional equipment or the specified printer language.

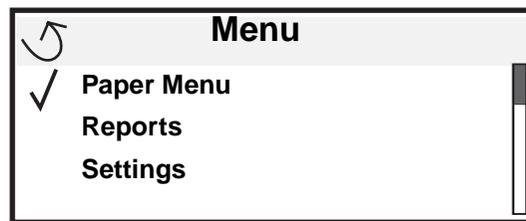

- Paper Menu**
- Default Source
 - Paper Size/Type
 - Configure MP
 - Substitute Size
 - Paper Texture
 - Paper Loading
 - Custom Types
 - Universal Setup
 - Bin Setup

- Reports**
- Menu Settings Page
 - Device Statistics
 - Network Setup Page
 - Network <x> Setup Page
 - Profiles List
 - NetWare Setup Page
 - Print Fonts
 - Print Directory

- Settings**
- Setup Menu
 - Finishing Menu
 - Quality Menu
 - Utilities Menu
 - PDF Menu
 - PostScript Menu
 - PCL Emul Menu
 - HTML Menu
 - Image Menu

- Network/Ports**
- TCP/IP
 - IPv6
 - Standard Network
 - Network Option <x>
 - Standard USB
 - USB Option <x>
 - Parallel and Parallel <x>
 - Serial Option <x>
 - NetWare
 - AppleTalk
 - LexLink


- Security**
- Max Invalid PIN
 - Job Expiration

- Help**
- Print All
 - Print Quality
 - Printing Guide
 - Supplies Guide
 - Media Guide
 - Print Defects
 - Menu Map
 - Information Guide
 - Connection Guide
 - Moving Guide

Understanding the printer operator panel

The operator panel consists of these items:



- A 4-line, back-lit, gray-scale display that can show both graphics and text
- Eight buttons: Back, Menu, Stop, Select (✓), ◀, ▶, ▲, and ▼
- Indicator light
- Numeric pad
- USB Direct Interface

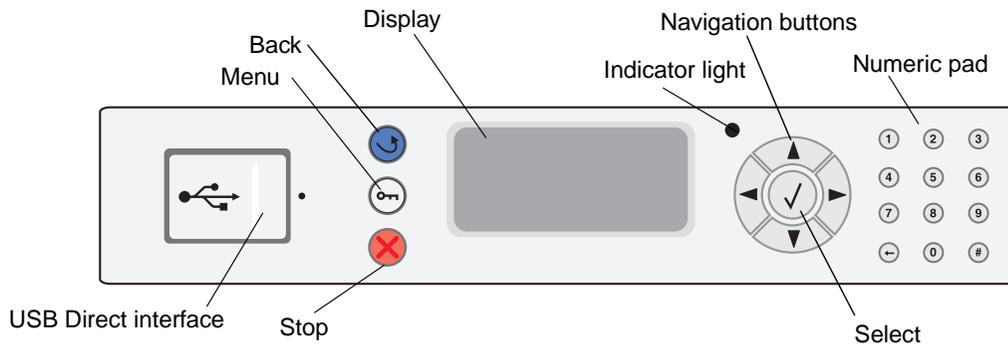

The use of the buttons and the layout of the display panel is described in the following table.

Button or operator panel item	Function										
Back 	To return to the last screen viewed. Note: Changes made on a screen will not be applied if you press the Back button.										
Menu 	To open the menu index. Note: The printer must be in the Ready state to access the menu index. A message indicating the menus are unavailable will appear if the printer is not ready.										
Stop 	To stop the mechanical operation of the printer. After pressing Stop , the message stopping appears. When the printer has stopped, the status line in the operator panel will show stopped , and a list of options will appear.										
Indicator light	A two-toned LED is used on the operator panel, one color being green and the other being red. The lights indicate whether the printer power is on, the printer is busy, idle, processing a job, or requires operator intervention. <table border="0" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th style="text-align: left;">Status</th> <th style="text-align: left;">Indicates</th> </tr> </thead> <tbody> <tr> <td>Off</td> <td>Power is off</td> </tr> <tr> <td>Solid green</td> <td>Printer is on, but idle</td> </tr> <tr> <td>Flashing green</td> <td>Printer is warming up, processing data, or printing a job.</td> </tr> <tr> <td>Solid red</td> <td>Operator intervention is required.</td> </tr> </tbody> </table>	Status	Indicates	Off	Power is off	Solid green	Printer is on, but idle	Flashing green	Printer is warming up, processing data, or printing a job.	Solid red	Operator intervention is required.
Status	Indicates										
Off	Power is off										
Solid green	Printer is on, but idle										
Flashing green	Printer is warming up, processing data, or printing a job.										
Solid red	Operator intervention is required.										

  Using printer menus

Button or operator panel item	Function
<p>Navigation buttons</p> 	<p>The Up and Down buttons are used to move up and down lists. When navigating through a list using the Up or Down button, the cursor moves one line at a time. Pressing the Down button at the bottom of the screen changes the screen to the next whole page.</p> <p>The Left and Right buttons are used to move within a screen, such as moving from one menu index item to another. They are also used to scroll through text that will not fit on the screen.</p> <p>The Select button is used to initiate action on a selection. Press Select when the cursor is next to the selection you want, such as following a link, submitting a configuration item, or to start or cancel a job.</p>
<p>USB Direct interface</p>	<p>The host USB Direct interface on the operator panel is used to plug in a USB flash memory device and print PDF files.</p> <p>Note: A USB port is located on the back of the printer to connect a PC or other peripheral.</p>
<p>Numeric pad</p> 	<p>The numeric pad consists of numbers, a pound (#) sign, and a backspace button. The 5 button has a raised bump for non-visual orientation.</p> <p>The numbers are used to enter numeric values for items like quantities or PINs. The backspace is used to delete the number to the left of the cursor. Pressing the backspace multiple times will delete additional entries.</p> <p>Note: The pound (#) sign is not used.</p>
<p>Display</p>  <p>Tell Me More screen</p>  <p>Show me screen</p> 	<p>The display shows messages and graphics describing the current state of the printer and indicating possible printer problems you must resolve.</p> <p>The top line of the display is the header line. If applicable, it will contain the graphic indicating the Back button can be used. It will also display the current status and the Supplies (Warnings) status. If multiple warnings are present, each warning will be separated by a comma.</p> <p>The other three lines of the display are the body of the screen. This is where you view printer status, supplies messages, Show me screens, and make selections.</p>

Menu Groups

Note: An asterisk (*) next to a value indicates the default setting.

Paper Menu

Use the Paper Menu to define the paper loaded in each paper tray, the default paper source, and the output bin.

Default Source

Menu selection	Purpose	Values	
Default Source	Identifies the default paper source.	Tray <x>	If you loaded the same size and type of paper in two paper sources (and the Paper Size and Paper Type menu items are correctly set), the trays are automatically linked. When one paper source is empty, paper automatically feeds from the next linked source.
		MP Feeder	
		Manual Paper	
		Manual Env	

Paper Size/Type

Note: Only installed paper sources are displayed.

This menu selection is used to set the size and type of media loaded into an input tray. Setting the paper size and type is a two-step process. In the first menu selection, *Size* appears in bold letters. After you select the media size, the screen will change, and *Type* appears in bold letters. You can then select the media type.

Menu selection	Purpose	Values	
Tray <x> Size/Type	Identifies the default paper size for each paper source. Note: For trays with automatic size sensing, only the value detected by the hardware appears.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal	If you loaded the same size and type of paper in two paper sources (and the Paper Size and Paper Type menu items are correctly set), the trays are automatically linked. When one paper source is empty, paper automatically feeds from the next linked source.

Using printer menus

Menu selection	Purpose	Values	
Tray <x> Size/type	Identifies the type of paper installed in each paper source. Note: If a user-defined name is available, it appears instead of Custom Type <x> . If two or more custom types share the same name, the name only appears once in the Paper Type list.	Plain Paper* Card Stock Transparency Labels Bond Letterhead Preprinted Colored Paper Custom Type <x>	Use this menu item to: <ul style="list-style-type: none"> • Optimize print quality for the specified paper. • Select paper sources through your software application by selecting type and size. <p>Automatically link paper sources. Any sources containing the same type and size of paper are automatically linked by the printer if you have set the Paper Size and the Paper Type to the correct values.</p>
MP Feeder Size/Type	Identifies the size of paper installed in the multipurpose feeder.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal 7 3/4 Envelope 10 Envelope DL Envelope C5 Envelope Other Envelope	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.
MP Feeder Size/Type	Identifies the type of paper installed in the multipurpose feeder. Note: If a user-defined name is available, it appears instead of Custom Type <x> . If two or more custom types share the same name, the name only appears once in the Paper Type value list.	Plain Paper* Card Stock Transparency Labels Bond Envelope Letterhead Preprinted Colored Paper Custom Type <x>	The multipurpose feeder is only displayed on the operator panel when Configure MP is set to Cassette.

Using printer menus

Menu selection	Purpose	Values
Manual Paper Size/Type	Identifies the paper size being manually loaded.	A4* (non-US) A5 JIS B5 Letter* (US) Legal Executive JIS B4 A3 11x17 Folio Statement Universal
Manual Paper Size/Type	Identifies the paper type being manually loaded.	Plain Paper* Card Stock Transparency Labels Bond Letterhead Preprinted Colored Paper Custom Type <x>
Manual Envelope Size/Type	Identifies the envelope size being manually loaded.	7 3/4 Envelope 10 Envelope* (US) DL Envelope* (non-US) C5 Envelope Other Envelope
Manual Envelope Size/Type	Identifies the envelope type being manually loaded.	Envelope* Custom Type <x>

Configure MP

This menu selection is used to configure the multipurpose feeder as another paper tray or manual feeder. If you link the multipurpose feeder with another tray, you can have the printer pull paper from the multipurpose feeder before taking paper from another tray.

Menu selection	Purpose	Values
Configure MP	Determines when the printer selects paper loaded in the multipurpose feeder.	Cassette* Manual First

Substitute Size

This menu selection is used to determine whether the printer can substitute another size paper if the requested paper size is not currently installed in any of the printer input sources. If, for example, Substitute Size is set to Letter/A4, and only letter size paper is installed in the

Using printer menus

printer. When a request is received to print on A4 paper, the printer will substitute letter for A4 and print the job instead of displaying a change paper request.

Menu selection	Purpose	Values	
Substitute Size	Substitutes the specified paper size if the requested size is not loaded.	Off Statement/A5 Letter/A4 11x17/A3 All Listed*	<ul style="list-style-type: none"> • The Off value indicates no size substitutions are allowed. • The All Listed value indicates that all available substitutions are allowed.

Paper Texture

This menu selection is used to set the media texture for each of the defined media types. This allows the printer to optimize the print quality for the specified media.

Menu selection	Purpose	Values	
Plain Texture	Identifies the texture of the media loaded in a specific input source.	Smooth Normal* Rough	
Transparency Texture			
Labels Texture			
Bond Texture			
Envelope Texture			
Letterhead Texture			
Preprinted Texture			
Colored Texture			
Card Stock Texture	Identifies the texture of the card stock loaded in a specific input source.	Smooth Normal* Rough	Shown if Card Stock is supported in the specified input source.
Custom <x> Texture	Identifies the texture of the custom media loaded in a specific input source.	Smooth Normal* Rough	Shown if the custom type is supported in the specified input source.

Using printer menus

Paper Loading

This menu selection is used to set the loading orientation for each paper type. This lets you load an input source with preprinted media, and then notify the printer that the media is loaded for duplex printing. You can then use your application software to indicate simplex printing. When simplex printing is selected, the printer automatically inserts blank pages to print the simplex job correctly.

Note: Paper Loading is only available if a duplex unit is installed.

Menu selection	Purpose	Values	
Labels Loading	Properly handles preprinted paper whether the job is a duplexed or single-sided job.	Duplex Off*	
Bond Loading			
Letterhead Loading			
Preprinted Loading			
Colored Loading			
Card Stock Loading	Properly handles preprinted card stock whether the job is a duplexed or single-sided job.	Duplex Off*	Shown if Card Stock is supported in the specified input source.
Custom <x> Loading	Properly handles preprinted custom paper whether the job is a duplexed or single-sided job.	Duplex Off*	Shown if the custom type is supported in the specified input source.

Custom Types

This menu selection is used to define a name for each custom paper type. You can assign names using a utility such as MarkVision or from the operator panel.

Menu selection	Purpose	Values	
Custom Type N	Specifies the type of paper associated with each Custom Type available in the Paper Type menu.	Paper* Card Stock Transparency Labels Envelope	The custom type media must be supported in the input source you designate in order to assign a user-defined name. Once the name is assigned, the name (truncated to 16 characters) will be displayed instead of Custom Type x .

Universal Setup

This menu selection is used to specify the height and width of the Universal Paper Size. By specifying the height and width for Universal Paper Size, the printer will use the Universal setting exactly like other paper sizes, including support for duplex and n-up.

Menu selection	Purpose	Values	
Units of Measure	Determines the unit of measure used to enter the Universal Height and Width.	Inches Millimeters	Inches is US default; Millimeters is international default.
Portrait Width	Sets the portrait width of the universal media. Note: If the value set exceeds the maximum width, the printer will use the maximum value allowed in inches or millimeters.	3 inches to 17 inches in 0.01 inch increments 76 mm to 432 mm in 1 mm increments	Shows either inches or mm from Units of Measure setting, 11.69 inches is the US default and 297 mm is the international default.

Using printer menus

Menu selection	Purpose	Values	
Portrait Height	Sets the portrait height of the universal media. Note: If the value set exceeds the maximum height, the printer will use the maximum value allowed in inches or millimeters.	3 inches to 17 inches in 0.01 inch increments 76 mm to 432 in 1 mm increments	Shows either inches or mm from Units of Measure setting; 17 inches US default, 432 international default.
Feed Direction	Specifies the feed direction.	Short Edge* Long Edge	Long Edge is only shown if the longest edge is shorter than the Maximum Physical Width of the printer.

Bin Setup

This menu selection is used to specify the output bin where you want your printed material to go to.

Note: Bin Setup is only displayed when at least one optional output bin is installed.

Menu selection	Purpose	Values	
Output Bin	Specifies the default bin for printed material.	Standard Bin*	<ul style="list-style-type: none"> If a user-defined name is available, it appears instead of Bin <x>. The name is truncated to 14 characters. If two or more bins share the same name, the name only appears once in the Output Bin value list.
		Bin <x>	
Configure Bins	Determines which output bin(s) the printer uses for a particular job.	Mailbox*	Sends print jobs to the output bin designated for that user.
		Link	Links two or more bins together as though they were one large bin. When one linked bin is full, the printer starts filling the next linked bin, and continues with each additional linked bin.
		Link Optional	Links all optional output bins as though they were one large bin, while leaving the standard bin individually addressable.
		Type Assignment	Sends each job to the output bin specified for that paper type.
Assign Type/Bin	Sends print jobs to a specific output bin based on the requested paper type. Note: If a user-defined name is available, it appears instead of Custom <x> Bin . The name is truncated to 14 characters. If two or more bins share the same name, the name only appears once in the Assign Type/Bin value list.	Plain Paper Bin	Disabled*
		Card Stock Bin	Standard Bin
		Transparency Bin	Bin 1
		Labels Bin	Bin 2
		Bond Bin	Note: Only installed output bins will be displayed. If Configure Bins is set to Type Assignment then the default is the Standard Bin.
		Envelope Bin	
		Letterhead Bin	
		Preprinted Bin	
		Colored Bin	
		Custom <x> Bin (<x> represents 1 through 6)	

Reports

Menu Settings Page

This menu selection prints a menu settings page.

Menu selection	Purpose	Values
Menu Settings Page	Prints information relating to the default printer settings and verifies that printer options are installed correctly.	After selecting this item, the page will print and the printer will return to Ready .

Device Statistics

This menu selection displays the printer statistics.

Menu selection	Purpose	Values
Device Statistics	Prints information relating to the printer statistics.	After selecting this item, the page will print and the printer will return to Ready .

Network Setup Page

This menu selection prints a network setup page.

Menu selection	Purpose	Values
Network Setup Page Network <x> Setup Page will appear if additional network options are installed.	Prints information relating to network settings and verifies the network connection. Note: This page also provides information that helps you configure for network printing.	After selecting this item, the page will print, and the printer will return to Ready .

Profiles List

This menu selection prints a list of profiles stored on this printer.

Menu Selection	Purpose	Values
Profiles List	Prints a list of profiles stored on the printer.	After selecting this item, the page will print, and the printer will return to Ready .

NetWare Setup Page

This menu selection prints information relating to the internal print server.

Menu selection	Purpose	Values
NetWare Setup Page	Prints information relating to the internal print server and the network settings defined by the Network <x> Setup menu item in the Network Menu.	After selecting this item, the page will print, and the printer will return to Ready .

Using printer menus

Print Fonts

This menu selection prints a list of the fonts stored in the printer.

Menu selection	Purpose	Values	
Print Fonts	Prints a sample of all the fonts available for the selected printer language.	PCL Fonts	Prints a sample of all printer fonts available for PCL emulation.
		PS Fonts	Prints a sample of all printer fonts available for PostScript emulation.

Print Directory

This menu selection prints the directory listing. The directory listing is a list of the resources that are stored on a formatted optional flash memory card or hard disk.

Menu selection	Purpose	Values
Print Directory	Prints a list of the resources that are stored on the optional flash memory card or hard disk. Note: Print Directory is available only when either a nondefective flash or disk is installed and formatted, and Job Buffer Size is not set to 100%.	After selecting this item, the page will print, and the printer will return to Ready .

Settings

Setup Menu

Use this menu selection to configure a variety of printer features.

Menu selection	Purpose	Values	
Display Language	Determines the language of the text displayed on the operator panel.	English	Note: All values may not be available.
		Français	
		Deutsch	
		Italiano	
		Español	
		Dansk	
		Norsk	
		Nederlands	
		Svenska	
		Português	
		Suomi	
		Russian	
		Polski	
		Magyar	
		Turkish	
		Czech	
Simplified Chinese			
Traditional Chinese			
Korean			
Japanese			

Using printer menus

Menu selection	Purpose	Values	
Power Saver	Specifies the amount of time (in minutes) the printer waits after a job is printed before it goes into a reduced power state.	Disabled	This value does not appear unless Energy Conserve is set to Off. See the <i>User's Guide</i> for more information.
		1...240	<p>Specifies the amount of time after a print job before the printer goes into Power Saver mode. (Your printer may not support the entire range of values.)</p> <p>The factory default Power Saver setting depends on your printer model. Print the menu settings page to determine the current Power Saver setting. When the printer is in Power Saver mode, it is still ready to receive print jobs.</p> <p>Select 1 to put the printer in Power Saver mode one minute after it finishes a print job. This uses much less energy, but requires more warm-up time for the printer. Select 1 if your printer shares an electrical circuit with room lighting and you notice lights flickering.</p> <p>Select a high value if your printer is in constant use. Under most circumstances, this keeps the printer ready to print with minimum warm-up time. Select a value between 1 and 240 minutes if you want a balance between energy consumption and a shorter warm-up period.</p>
Alarms	Controls whether the printer sounds an alarm when the printer requires operator intervention.	Alarm Control:	<p>Off—Printer does not sound an alarm.</p> <p>Single*—Printer sounds three quick beeps.</p> <p>Continuous—Printer repeats three beeps every 10 seconds.</p> <p>Note: Staple and hole punch alarms appear only when an optional finisher is installed.</p>
		Off	
		Single*	
		Continuous	
Toner Alarm:	<p>Off*</p> <p>Single</p> <p>Continuous</p>		
Off*			
Single			
Staple Alarm:	<p>Off*</p> <p>Single</p> <p>Continuous</p>		
Off*			
Single			
Hole Punch Alarm:	<p>Off*</p> <p>Single</p> <p>Continuous</p>		
Off*			
Single			

Using printer menus

Menu selection	Purpose	Values	
Timeouts	<p>Specifies the amount of time (in seconds) the printer waits to return to the home screen, receive an end-of-job message, or receive additional bytes of data from the computer.</p> <p>Note: Wait Timeout is only available when you use PostScript emulation. This menu value has no effect on PCL emulation print jobs.</p>	Screen Timeout: 15–300 (30*)	<p>Disabled—Disables Screen Timeout.</p> <p>15–300—Specifies the amount of time the printer waits before returning to the home screen.</p> <p>30* is the default setting.</p>
		Print Timeout Disabled 1–255 (90*)	<p>Disabled—Disables Print Timeout.</p> <p>1–255—Specifies the amount of time the printer waits for an end-of-job message before canceling the remainder of the print job.</p> <p>Note: When the timer expires, any partially formatted page still in the printer is printed, and other input ports are examined to see if data exists.</p> <p>90* is the default setting.</p>
		Wait Timeout: Disabled 15...65535 (40*)	<p>Disabled—Disables Wait Timeout.</p> <p>15...65535—Specifies the amount of time the printer waits for additional data before it cancels the job.</p> <p>40* is the default setting.</p>
Print Recovery	<p>Specifies whether the printer continues from certain offline situations, reprints jammed pages, or waits until the entire page is processed and ready to be printed.</p>	Auto Continue: Disabled* 5–255	<p>Lets the printer automatically continue from certain offline situations when not resolved within the specified time period.</p> <p>5–255—Specifies the amount of time the printer waits.</p>
		Jam Recovery: On Off Auto*	<p>Specifies whether the printer reprints jammed pages.</p> <p>On—Printer reprints jammed pages.</p> <p>Off—Printer does not reprint jammed pages.</p> <p>Auto*—Printer reprints a jammed page unless the memory required to hold the page is needed for other printer tasks.</p>
		Page Protect: Off* On	<p>Successfully prints a page that may otherwise generate Complex Page errors.</p> <p>Off*—Prints a partial page of data if memory is insufficient to process the entire page.</p> <p>On—Ensures that an entire page is processed before it prints.</p> <p>Note: If, after selecting On, you still cannot print the page, you may also have to reduce the size and number of fonts on the page, or increase the installed printer memory.</p> <p>Note: For most print jobs, you do not need to select On. When On is selected, printing may be slower.</p>

Using printer menus

Menu selection	Purpose	Values	
Printer Language	Specifies the default printer language used to communicate data from the computer to the printer. Note: Setting a printer language as the default does not prevent a software application from sending print jobs that use the other language.	PCL Emulation PS Emulation*	PCL emulation —Uses a PCL interpreter for incoming host communications. PostScript emulation —Uses a PS interpreter for incoming host communications.
Print Area	Modifies the logical and physical printable area.	Normal* Whole Page	Note: The Whole Page setting only affects pages printed using PCL 5 interpreter. This setting has no effect on pages printed using the PCL XL or PostScript interpreters. If you try to print any data in the non-printable area defined by Normal Print Area, the printer will clip the image at the boundary defined by the Normal defined printable area.
Download Target	Specifies the storage location for downloaded resources. Storing downloaded resources in flash memory or on a hard disk is permanent storage rather than the temporary storage that RAM provides. The resources remain in the flash memory or on the hard disk even when the printer is turned off.	RAM*	All downloaded resources are automatically stored in printer memory (RAM).
		Flash	All downloaded resources are automatically stored in flash memory.
		Disk	All downloaded resources are automatically stored on the hard disk.
Job Accounting	Specifies to store or not store statistical information about your most recent print jobs on the hard disk. The statistics include whether the job printed with or without errors, the print time, the job size (in bytes), the requested paper size and paper type, the total number of printed pages, and the number of copies requested. Note: Job Accounting is only displayed when a hard disk is installed, is neither defective nor Read/Write or Write protected, and Job Buffer Size is not set to 100%.	Off*	Printer does not store job statistics on disk.
		On	Printer stores job statistics for the most recent print jobs.
Resource Save	Specifies what the printer does with downloaded resources, such as fonts and macros stored in RAM, if the printer receives a job that requires more memory than is available.	Off*	Printer retains downloaded resources only until memory is needed. It then deletes those resources associated with the inactive printer language.
		On	Printer retains all downloaded resources for all printer languages during language changes and printer resets. If the printer runs out of memory, 38 Memory Full appears.

Using printer menus

Menu selection	Purpose	Values	
Factory Defaults	Returns printer settings to the factory default values.	Restore	<ul style="list-style-type: none"> All menu items are returned to the factory default values except: <ul style="list-style-type: none"> Display Language. All settings in the Parallel Menu, Serial Menu, Network Menu, and USB Menu. All downloaded resources (fonts, macros, and symbol sets) in printer memory (RAM) are deleted. (Resources residing in flash memory or on the hard disk are unaffected.)
		Do Not Restore*	User-defined settings remain.

Finishing Menu

Use this menu selection to define how the printer delivers the printed output.

Menu selection	Purpose	Values	
Duplex	Sets duplexing as the default for all print jobs. Note: You must have an optional duplex unit installed. Note: Select Duplex from the printer driver to duplex only specific jobs.	Off*	Prints on one side of the paper.
		On	Prints on both sides of the paper.
Duplex Bind	Defines the way duplexed pages would be bound, and how the printing on the back of the sheet (even-numbered pages) is oriented in relation to the printing on the front (odd-numbered pages). Note: You must have an optional duplex unit installed.	Long Edge*	Assumes binding along the long edge of the page (left edge for portrait orientation and top edge for landscape orientation).
		Short Edge	Assumes binding along the short edge of the page (top edge for portrait orientation and left edge for landscape orientation).
Copies	Sets the number of copies you want for the printer default value. Note: Set the number of copies required for a specific job from the printer driver.	1...999 (1*)	Values selected from the printer driver always override values selected from the operator panel.
Blank Pages	Specifies whether to include application-generated blank pages as part of your printed output.	Do Not Print*	Does not print application-generated blank pages as part of your job.
		Print	Prints application-generated blank pages as part of your job.
Collation	Keeps the pages of a print job stacked in sequence when printing multiple copies of the job.	Off*	Prints each page of a job the number of times specified by the Copies menu item. For example, if you set Copies to 2, and send three pages to print, the printer prints page 1, page 1, page 2, page 2, page 3, page 3.
		On	Prints entire job the number of times specified by the Copies menu item. For example, if you set Copies to 2, and send three pages to print, the printer prints page 1, page 2, page 3, page 1, page 2, page 3.

Using printer menus

Menu selection	Purpose	Values											
Separator Sheets	Inserts blank separator sheets between jobs, between multiple copies of a job, or between each page of a job.	None*	Does not insert separator sheets.										
		Between Copies	Inserts a blank sheet between each copy of a job. If Collation is Off, a blank page is inserted between each set of printed pages (all page 1's, all page 2's, and so on). If Collation is On, a blank page is inserted between each collated copy of the job.										
		Between Jobs	Inserts a blank sheet between jobs.										
		Between Pages	Inserts a blank sheet between each page of a job. This is useful if you are printing transparencies or want to insert blank pages in a document for notes.										
Separator Source	Specifies the paper source that holds separator sheets.	Tray <x> (Tray 1*)	Selects separator sheets from the specified tray.										
		MP Feeder	Selects separator sheets from the multipurpose feeder. Note: You must also set Configure MP to Cassette.										
Multipage Print	Prints multiple-page images on one side of a sheet of paper. Also called <i>n-up</i> or <i>Paper Saver</i> .	Off*	Prints 1 page image per side.										
		2 Up	Prints 2 page images per side.										
		3 Up	Prints 3 page images per side.										
		4 Up	Prints 4 page images per side.										
		6 Up	Prints 6 page images per side.										
		9 Up	Prints 9 page images per side.										
		12 Up	Prints 12 page images per side.										
		16 Up	Prints 16 page images per side.										
Multipage Order	Determines the positioning of multiple page images when using Multipage Print. The positioning depends on the number of images and whether the images are portrait or landscape in orientation.	Horizontal*											
		Vertical											
		Rev Horizontal											
		Rev Vertical											
		For example, if you select 4-Up multipage printing and portrait orientation, the results differ depending on the Multipage Order value you select:											
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center; border: none;">Horizontal Order</th> <th style="text-align: center; border: none;">Vertical Order</th> <th style="text-align: center; border: none;">Reverse Horizontal Order</th> <th style="text-align: center; border: none;">Reverse Vertical Order</th> </tr> </thead> <tbody> <tr> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">1</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">2</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">2</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">1</td> </tr> <tr> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">3</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">4</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">4</td> <td style="border: 1px solid black; text-align: center; width: 50px; height: 50px;">3</td> </tr> </tbody> </table>		Horizontal Order	Vertical Order	Reverse Horizontal Order	Reverse Vertical Order	1	2	2	1	3	4	4	3
Horizontal Order	Vertical Order	Reverse Horizontal Order	Reverse Vertical Order										
1	2	2	1										
3	4	4	3										

Using printer menus

Menu selection	Purpose	Values	
Multipage View	Determines the orientation of a multiple-page sheet.	Auto*	Lets the printer choose between portrait and landscape orientation.
		Long Edge	Sets the long edge of the paper as the top of the page (landscape).
		Short Edge	Sets the short edge of the paper as the top of the page (portrait).
Multipage Border	Prints a border around each page image when using Multipage Print.	None*	Does not print a border around each page image.
		Solid	Prints a solid line border around each page image.
Staple Job	Sets stapling as the default for all print jobs. Note: Only displayed when an optional finisher is installed. Note: Select stapling from the printer driver if you want to staple only specific jobs.	Off*	Does not staple print jobs.
		Auto Front Back Dual	Staples each print job based on information sent from the printer driver or application software.
Hole Punch	Punches holes along the edge of the paper. Note: Only displayed when an optional finisher is installed.	Off*	Does not hole punch print jobs.
		On	Hole punches each print job sent to the printer.
Hole Punch Mode	Punches holes along the edge of the paper. Note: Only displayed when an optional finisher is installed.	2 3*	Only displayed when the 3 Hole Finisher is installed.
		2 4*	Only displayed when the 4 Hole Finisher is installed.
Offset Pages	Offsets the output of each print job or each copy of a print job, making it easier to separate the documents stacked in the finisher output bin. Note: Only displayed when an optional finisher is installed.	None*	Stacks all sheets directly on top of each other.
		Between Copies	Offsets each copy of a print job.
		Between Jobs	Offsets each print job.

Quality Menu

Use this menu selection to change settings that affect print quality and save toner.

Menu selection	Purpose	Values	
Print Resolution	To select printed output resolution.	600 dpi 1200 dpi 2400 Image Q*	
Toner Darkness	Lightens or darkens printed output and conserves toner.	1–10	8* is the default setting. Select a lower number to lighten the printed output or save toner.
Brightness	Adjusts the gray value of printed objects.	-6 – +6	0* is the default setting.
Contrast	Adjusts the contrast of printed objects.	0–5	0* is the default setting.

Using printer menus

Utilities Menu

Use this menu selection to change printer settings, remove jobs, set up printer hardware, and troubleshoot printer problems.

Menu selection	Purpose	Values	
Factory Defaults	Returns printer settings to the factory default values.	Do Not Restore*	User-defined settings remain.
		Restore Now	All menu items are returned to the factory default values except: <ul style="list-style-type: none"> • Display Language. • All settings in the Parallel Menu, Serial Menu, Network Menu, and USB Menu. • Resources residing in flash memory or on the hard disk. Note: All downloaded resources (fonts, macros, and symbol sets) in printer memory (RAM) are deleted.
Remove Held Jobs	Removes confidential and held jobs from the printer hard disk.	Confidential Held Not Restored All	Selecting a menu value only affects jobs that are resident in the printer. Bookmarks, jobs on USB flash memory devices, and other types of held jobs are not affected.
Format Flash	Formats the flash memory. Warning: Do not turn off the printer while the flash is formatting.	Yes	Deletes any data stored in flash memory and prepares the flash memory to receive new resources.
		No*	Cancels the request to format the flash memory and leaves current resources stored in flash memory.
Defragment Flash	Retrieves lost storage area from resources that were deleted from flash memory. Warning: Do not turn off the printer while the flash is defragmenting.	Yes	Transfers all resources stored in flash memory to printer memory and then reformats the flash memory option. When the format operation is complete, the resources are loaded back into flash memory.
		No*	Cancels the request to defragment the flash memory.
Format Disk	Formats the printer hard disk. Warning: Do not turn off the printer while the hard disk is formatting.	Yes	Deletes any data stored on the hard disk and prepares the device to receive new resources.
		No*	Cancels the request to format the hard disk and leaves current resources stored on the disk.
Job Acct Stat	Prints a listing of all job statistics stored on the hard disk, or clears all statistics on the disk.	Print	Prints all statistics available for the most recent print jobs.
		Clear	Deletes all accumulated job statistics from the hard disk.
Hex Trace	Helps isolate the source of a print job problem.	Activate	With Hex Trace active, all data sent to the printer is printed in hexadecimal and character representation. Control codes are not executed. Note: To exit Hex Trace, turn the printer off, or reset the printer from the Job Menu.
Coverage Estimator	Provides an estimate of the percent coverage of black toner on a page. The estimate is printed on the page.	Off*	Percent coverage is not printed.
		On	Prints the estimated percentage of coverage.

Using printer menus

Menu selection	Purpose	Values	
LCD Contrast	Adjusts the contrast of the operator panel display.	1 - 10	5* is the default setting. A higher value will make the display appear lighter, a lower value makes the display appear darker.
LCD Brightness	Adjusts the brightness of the operator panel display.	1 - 10	5* is the default setting. A higher value increases the brightness of the display, a lower value decreases the brightness of the display.

PDF Menu

Use this menu selection to change printer settings that affect PDF jobs.

Menu selection	Purpose	Values	
Scale to Fit	Scales page content to fit the selected media size.	Yes No*	Yes —Scales the page to fit the selected print media. No* —Does not scale the page; printed text or graphics will be cropped if larger than the selected print media.
Annotations	Specifies whether to print annotations in the PDF.	Do Not Print* Print	Do Not Print* —Does not print PDF annotations. Print —Prints PDF annotations.

PostScript Menu

Use this menu selection to change printer settings that affect jobs using the PostScript printer language.

Menu selection	Purpose	Values	
Print PS Error	Prints a page defining the PostScript emulation error when an error occurs.	Off*	Discards the print job without printing an error message.
		On	Prints an error message before it discards the job.
Font Priority	Establishes the font search order. Note: Font Priority is only displayed when a formatted flash or hard disk is installed, is neither defective nor Read/Write or Write protected, and Job Buffer Size is not set to 100%.	Resident*	Printer searches printer memory for the requested font before searching flash memory or hard disk.
		Flash/Disk	Printer searches the hard disk and flash memory for the requested font before searching printer memory.

Using printer menus

PCL Emul Menu

Use this menu selection to change printer settings that affect jobs using the PCL emulation printer language.

Menu selection	Purpose	Values	
Font Source	Determines the set of fonts displayed in the Font Name menu item.	Resident*	Displays all fonts resident in printer RAM when the printer ships from the factory.
		Disk	Displays all fonts stored on the printer hard disk.
		Flash	Displays all fonts stored in flash memory.
		Download	Displays all fonts downloaded to printer RAM.
		All	Displays all fonts available to the printer from all sources.
Font Name	Identifies a specific font from the specified font source.	R0 Courier*	The font name and font ID for all fonts in the selected font source are displayed. The font source abbreviation is R for resident, F for flash, K for disk, and D for download.
Symbol Set	Determines the symbol set for a specified font name.	10U PC-8* (US) (country/region-specific factory default values)	A symbol set is a set of alphabetic and numeric characters, punctuation, and special symbols used when printing with a selected font. Symbol sets support the different requirements for languages or specific applications, such as math symbols for scientific text. Only the symbol sets supported for the selected font name are displayed.
		12U PC-850* (non-US) (country/region-specific factory default values)	

Using printer menus

Menu selection	Purpose	Values	
PCL Emulation Settings	Changes the point size for scalable typographic fonts.	Point Size: 1.00–1008.00 (12*)	Point size refers to the height of the characters in the font. One point equals approximately 1/72 of an inch. You can select point sizes from 1 to 1008 in increments of 0.25 points. Note: Point Size is only displayed for typographic fonts.
	Specifies the font pitch for scalable monospaced fonts.	Pitch: 0.08–100.00 (10*)	Pitch refers to the number of fixed-space characters in a horizontal inch of type. You can select a pitch from 0.08 to 100 characters per inch (cpi) in increments of 0.01 cpi. For nonscalable monospaced fonts, the pitch is displayed but cannot be changed. Note: Pitch is only displayed for fixed, or monospaced, fonts.
	Determines how text and graphics are oriented on the page.	Orientation: Portrait* Landscape	Portrait prints text and graphics parallel to the short edge of the paper. Landscape prints text and graphics parallel to the long edge of the paper.
	Determines the number of lines that print on each page.	Lines per Page: 1–255 60* (US) 64* (non-US)	The printer sets the amount of space between each line (vertical line spacing) based on the Lines per Page, Paper Size, and Orientation menu items. Select the correct Paper Size and Orientation before changing Lines per Page.
	Sets the width of the logical page for A4 size paper.	A4 Width: 198 mm* 203 mm	Note: The 203 mm setting makes the logical page wide enough to print eighty 10-pitch characters.
	Specifies whether the printer automatically performs a carriage return after a line feed control command.	Auto CR after LF: Off* On	Off —Printer does not perform a carriage return after a line feed control command. On —Printer performs a carriage return after a line feed control command.
	Specifies whether the printer automatically performs a line feed after a carriage return control command.	Auto LF after CR: Off* On	Off —Printer does not perform a line feed after a carriage return control command. On —Printer performs a line feed after a carriage return control command.

Using printer menus

Menu selection	Purpose	Values	
Tray Renumber	Configures the printer to work with printer drivers or applications that use different source assignments for the paper trays. Note: See the <i>Technical Reference</i> for more information about assigning source numbers.	Assign MP Feeder:	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Tray [x]:	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Man Paper:	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		Assign Man Env:	Off —Printer uses factory default paper source assignments. None —Paper source ignores the Select Paper Feed command. 0–199 —Select a numeric value to assign a custom value to a paper source.
		View Factory Def	Displays the factory default value assigned to each paper source.
		Restore Defaults	Select Yes to return all tray assignments to factory default values.

Using printer menus

HTML Menu

This menu selection is used to change the printer HTML settings.

Menu selection	Purpose	Values	
Font Name	Sets the default font for HTML documents. Note: Times will be used in HTML documents that do not specify a font.	Albertus MT Antique Olive Apple Chancery Arial MT Avant Garde Bodoni Bookman Chicago Clarendon Cooper Black Copperplate Coronet Courier Eurostile Garamond Geneva Gill Sans Goudy Helvetica Hoefler Text Intl CG Times Intl Courier	Intl Univers Joanna MT Letter Gothic Lubalin Graph Marigold MonaLisa Recut Monaco New CenturySbk New York Optima Oxford Palatino StempelGaramnd Taffy Times TimesNewRoman Univers Zapf Chancery
Font Size	Sets the default font size for HTML documents.	1 pt–255 pt (12 pt*)	You can select point sizes from 1 to 255 points in 1 point increments.
Scale	Scales the default font for HTML documents.	1%–400% (100%*)	You can select scale sizes from 1 to 100% in 1% increments.
Orientation	Sets the page orientation for HTML documents.	Portrait* Landscape	Portrait* —Prints text and graphics parallel to the short edge of the paper. Landscape —Prints text and graphics parallel to the long edge of the paper.
Margin Size	Sets the page margin for HTML documents.	8 mm–255 mm (19 mm*)	You can set the margin from 8 to 255 mm in 1 mm increments.
Backgrounds	Specifies whether to print backgrounds in HTML documents.	Print* Do not print	Print* —Prints HTML backgrounds. Do Not Print —Does not print HTML backgrounds.

Using printer menus

Image Menu

This menu selection is used to change the size or orientation of a printed image, or to invert a printed image.

Menu selection	Purpose	Values	
Auto Fit	Selects optimal paper size, scaling, and orientation.	On* Off	Note: When set to On, this setting overrides the scaling setting and can override the orientation setting for some images.
Invert	Inverts bi-tonal monochrome images.	On Off*	Note: Does not apply to GIF or JPEG.
Scaling	Scales the image to fit media size.	Anchor Top Left Best Fit* Anchor Center Fit Height / Width Fit Height Fit Width	Note: When the Auto Fit setting is set to On, Scaling is automatically set to Best Fit.
Orientation	Sets the image orientation.	Portrait* Landscape Rev Portrait Rev Landscape	Portrait* —Prints text and graphics parallel to the short edge of the paper. Landscape —Prints text and graphics parallel to the long edge of the paper.

Security

This menu selection is used to set security levels on individual print jobs requiring a PIN and securing an installed hard disk.

Menu selection	Purpose	Values	
Max Invalid PIN	Limits the number of times an invalid pin number can be entered.	Off* 2 3 4 5 6 7 8 9 10	<ul style="list-style-type: none"> This menu selection only appears if a hard disk option is installed. The printer counts the number of times in a row an invalid pin for a user name is entered. Once the limit is reached, the jobs for that user name are deleted.
Job Expiration	Limits the amount of time a confidential job stays in the printer before it is deleted.	Off* 1 hour 4 hours 24 hours 1 week	

Using printer menus

Network/Ports

TCP/IP

This menu section is use to view and change the Transmission Control Protocol/Internet Protocol settings.

Note: This menu is not displayed for non-network models.

Menu selection	Purpose	Values	
TCP/IP	Sets the network option to TCP/IP (Transmission Control Protocol/Internet Protocol) Note: This menu is not displayed for non-network models.	Activate	On* Off
		View Hostname	View only
		Address	4 field IP address
		Netmask	
		Gateway	
		Enable DHCP	On* Off
		Enable RARP	
		Enable BOOTP	
		AutoIP	
		Enable FTP/TFTP	
		HTTP Server Enabled	4 field IP address
		WINS Server Address	
		DNS Server Address	

IPv6

Use this menu setting to view or change Internet Protocol Version 6 settings.

Note: This menu is not displayed for non-network models.

Menu selection	Purpose	Values	
IPv6	Sets the network to IPv6 (Internet Protocol Version 6).	Enable IPv6	Yes* No
		View Hostname	View only
		View Address	
		View Router Address	
		Enable DHCPv6	Yes* No

Using printer menus

Standard Network and Network <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through a network port (either Standard Network or Network <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the network port requires it, regardless of the default printer language.	On*	Printer examines data on the network interface and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the network port requires it, regardless of the default printer language.	On*	Printer examines data on the network interface connection and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	Off	The printer will not perform any NPA processing.
		Auto*	Printer examines the incoming data to determine the format. If the incoming data is not NPA packets, the information is passed to the printer as non-NPA.
Network Buffer	Configures the size of the network input buffer. Note: Changing the Network Buffer menu item automatically resets the printer.	Auto*	Printer automatically calculates the Network Buffer size (recommended setting).
		3K to maximum size allowed (1k increments)	User specifies the Network Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Network Buffer size, disable or reduce the size of the parallel, serial, and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing this menu item automatically resets the printer.	Off*	Does not buffer jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.

Using printer menus

Menu selection	Purpose	Values	
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	On	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		Off	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.

Standard USB and USB <x>

Use this menu selection to change printer settings affecting a Universal Serial Bus (USB) port (USB <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the USB port requires it, regardless of the default printer language.	On*	Printer examines the data on the USB port and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the USB port requires it, regardless of the default printer language.	On*	Printer examines data on the USB interface and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	Off	The printer will not perform any NPA processing.
		On	All data received by the printer must be in NPA packets. Any non packet data received will be rejected as bad.
		Auto*	Printer examines the incoming data to determine the format. If the incoming data is not NPA packets, the information is passed to the printer as non-NPA.

Using printer menus

Menu selection	Purpose	Values	
USB Buffer	Configures the size of the USB input buffer. Note: Changing the USB Buffer menu item automatically resets the printer.	Disabled	Job buffering is disabled. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the USB Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the USB Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the USB Buffer size, disable or reduce the size of the parallel, serial, and network buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing the Job Buffering menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	Off	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		On	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.
ENA Address	Sets the USB port ENA Address.	4 field IP address	Shown only if an ENA is attached through the USB port.
ENA Netmask	Sets the USB port ENA Netmask.		
ENA Gateway	Sets the USB port ENA Gateway.		

Parallel and Parallel <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through a parallel port (either Std Parallel or Parallel <x>).

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the parallel port requires it, regardless of the default printer language.	On*	Printer examines data on the parallel interface and selects PCL emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.

Using printer menus

Menu selection	Purpose	Values	
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the parallel port requires it, regardless of the default printer language.	On*	Printer examines data on the parallel interface and selects PostScript emulation if the data indicates that is the required printer language.
		Off	Printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	On	All data received by the printer must be in NPA packets. Any non packet data received will be rejected as bad.
		Off	The printer will not perform any NPA processing.
		Auto*	Printer examines the incoming data to determine the format. If the incoming data is not NPA packets, the information is passed to the printer as non-NPA.
Parallel Buffer	Configures the size of the parallel input buffer. Note: Changing this menu item automatically resets the printer.	Disabled	Disables job buffering. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the Parallel Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the Parallel Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Parallel Buffer size, disable or reduce the size of the serial and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing this menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Advanced Status	Enables bidirectional communication through the parallel port.	Off	Disables parallel port negotiation.
		On*	Enables bidirectional communication through the parallel interface.
Protocol	Specifies the parallel interface protocol.	Standard	May resolve some parallel interface problems.
		Fastbytes*	Provides compatibility with most existing parallel interface implementations (recommended setting).
Honor Init	Determines whether the printer honors hardware initialization requests from the computer. The computer requests initialization by activating the INIT signal on the parallel interface. Many personal computers activate the INIT signal each time the computer is turned on and off.	Off*	Printer does not honor hardware initialization requests from the computer.
		On	Printer honors hardware initialization requests from the computer.

Using printer menus

Menu selection	Purpose	Values	
Parallel Mode 2	Determines whether the parallel port data is sampled on the leading or trailing edge of strobe.	On*	Samples parallel port data on the leading edge of strobe.
		Off	Samples parallel port data on the trailing edge of strobe.
Mac Binary PS	Configures the printer to process Macintosh binary PostScript print jobs.	On	Printer processes raw binary PostScript print jobs from computers using the Macintosh operating system. Note: This setting often causes Windows print jobs to fail.
		Off	Printer filters PostScript print jobs using standard protocol.
		Auto*	Printer processes print jobs from computers using either Windows or Macintosh operating systems.

Serial <x>

Use this menu selection to change printer settings affecting jobs sent to the printer through an optional serial port.

Menu selection	Purpose	Values	
PCL SmartSwitch	Configures the printer so it automatically switches to PCL emulation when a print job received through the serial port requires it, regardless of the default printer language.	On*	On* —The printer examines the data at the serial interface and selects PCL emulation if the data indicates that is the required printer language. Off —The printer does not examine the incoming data. The printer uses PostScript emulation to process the job if PS SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PS SmartSwitch is Off.
		Off	
PS SmartSwitch	Configures the printer so it automatically switches to PostScript emulation when a print job received through the serial port requires it, regardless of the default printer language.	On*	On* —The printer examines the data at the serial interface and selects PostScript emulation if the data indicates that is the required printer language. Off —The printer does not examine the incoming data. The printer uses PCL emulation to process the job if PCL SmartSwitch is On, or uses the default printer language specified in the Setup Menu if PCL SmartSwitch is Off.
		Off	
NPA Mode	Specifies whether the printer performs the special processing required for bidirectional communication, following the conventions defined in the Network Printing Alliance (NPA) Protocol. Note: Changing this menu item automatically resets the printer.	On	All data received by the printer must be in NPA packets. Any non packet data received will be rejected as bad.
		Off	The printer will not perform any NPA processing.
		Auto*	Printer examines the incoming data to determine the format. If the incoming data is not NPA packets, the information is passed to the printer as non-NPA.

Using printer menus

Menu selection	Purpose	Values	
Serial Buffer	Configures the size of the serial input buffer. Note: Changing the Serial Buffer menu item automatically resets the printer.	Disabled	Disables job buffering. Any jobs already buffered on the disk are printed before normal processing of incoming jobs resumes.
		Auto*	Printer automatically calculates the Serial Buffer size (recommended setting).
		3K to maximum size allowed	User specifies the Serial Buffer size. The maximum size depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To maximize the range for the Serial Buffer size, disable or reduce the size of the parallel and USB buffers.
Job Buffering	Temporarily stores jobs on the printer hard disk before printing. Note: Changing the Job Buffering menu item automatically resets the printer.	Off*	Does not buffer print jobs to the hard disk.
		On	Buffers print jobs to the hard disk.
		Auto	Buffers print jobs only if the printer is busy processing data from another input port.
Serial Protocol	Selects the hardware and software handshaking values for the serial interface.	DTR*	Hardware handshaking.
		DTR/DSR	Hardware handshaking.
		XON/XOFF	Software handshaking.
		XON/XOFF/DTR	Combined hardware and software handshaking.
		XONXOFF/DTRDSR	Combined hardware and software handshaking.
Robust XON	Determines whether the printer communicates availability to the computer. This menu item only applies to the serial port if Serial Protocol is set to XON/XOFF.	Off*	Printer waits to receive data from the computer.
		On	Printer sends a continuous stream of XONs to the host computer to indicate that the serial port is ready to receive more data.
Baud	Specifies the rate at which data can be received through the serial port. Note: 138200, 172800, 230400, and 345600 baud rates are displayed in the STANDARD SERIAL menu. These values are not displayed in the SERIAL OPTION 1, SERIAL OPTION 2, or SERIAL OPTION 3 menus.	1200	
		2400	
		4800	
		9600*	
		19200	
		38400	
		57600	
		115200	
		138200	
		172800	
		230400	
345600			
Data Bits	Specifies the number of data bits that are sent in each transmission frame.	7	
		8*	

Using printer menus

Menu selection	Purpose	Values	
Parity	Sets the parity for serial input and output data frames.	Even	
		Odd	
		None*	
		Ignore	
Honor DSR	Determines whether the printer uses the Data Set Ready (DSR) signal. DSR is one of the handshaking signals for most serial interface cables. The serial interface uses DSR to distinguish data sent by the computer from data created by electrical noise in the serial cable. This electrical noise can cause stray characters to print. Select On to prevent stray characters from printing.	Off*	All data received by the serial port is treated as valid data.
		On	Only data received while the DSR signal is high is treated as valid.

NetWare

Use this menu selection to view or change the printer NetWare settings.

Menu selection	Purpose	Values	
View Login Name	Displays the assigned NetWare login name.	Selecting View Login Name displays the NetWare name on the operator panel.	
View Print Mode	Displays the assigned NetWare print mode.	Selecting View Print Mode displays the NetWare print mode on the operator panel.	
View Network Number	Displays the assigned NetWare number.	Selecting View Network Number displays the NetWare network number on the operator panel.	
Activate	Activates or deactivates the NetWare feature.	On Off	On —Activates the NetWare feature. Off —Deactivates the NetWare feature.
Ethernet 802.2	Sets the Ethernet 802.2 value On or Off.	On* Off	
Ethernet 802.3	Sets the Ethernet 802.3 value On or Off.	On* Off	
Ethernet Type II	Sets the Ethernet Type II value On or Off.	On* Off	
Ethernet SNAP	Sets the Ethernet SNAP value On or Off.	On* Off	
Packet Burst	Sets the Packet Burst value On or Off.	On Off *	
NSQ/GSQ Mode	Sets the NSQ/GSQ Mode value On or Off.	On Off *	

Using printer menus

AppleTalk

Use this menu selection to view or change the printer AppleTalk settings.

Menu selection	Purpose	Values	
View Name	Displays the assigned AppleTalk name.	Selecting View Name displays the AppleTalk name on the operator panel.	
View Address	Displays the assigned AppleTalk address.	Selecting View Address displays the AppleTalk address on the operator panel.	
Activate	Activates or deactivates the AppleTalk feature.	On Off	On —Activates the AppleTalk feature. Off —Deactivates the AppleTalk feature.
Set Zone *	Provides a list of zones from network.	Default will be default zone for the network. If no default zone exists on the network, the * will be the default.	

LexLink

Use this menu selection to view your LexLink name or change your LexLink activation.

Menu selection	Purpose	Values	
View Nickname	Displays the assigned LexLink nickname.	Selecting View Nickname displays the LexLink nickname on the operator panel.	
Activate	Activates or deactivates the LexLink feature.	On Off	On —Activates the LexLink feature. Off —Deactivates the LexLink feature.

Using printer menus

Help


This menu selection is used to print some or all of the resident Help Menu Pages. These pages contain information about printer connectivity, print quality, paper tips, and supplies.

Note: If the operator panel is set to other language, the document will be printed in English.

The Help Pages can be printed in the following languages.

English	German	Spanish	Norwegian	Swedish	Finnish	Polish
French	Italian	Danish	Dutch	Portuguese	Russian	

Menu selection	Purpose	Values
Print All	Prints all Help menu topics.	After selecting this item, the Help menu pages will print, and the printer will return to Ready .
Print Quality	Prints the Print Quality topic.	After selecting this item, the Help menu topic will print, and the printer will return to Ready .
Printing Guide	Prints the Printing Guide topic.	
Supplies Guide	Prints the Supplies Guide topic.	
Media Guide	Prints the Media Guide topic.	
Print Defects	Prints the Print Defect sheet.	
Menu Map	Prints the Menu Map topic.	
Information Guide	Prints the Information Guide topic.	
Connection Guide	Prints the Connection Guide topic.	
Moving Guide	Prints the Moving Guide topic.	

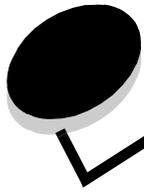

Understanding printer messages

The printer operator panel displays messages describing the current state of the printer and indicates possible printer problems you must resolve. This topic provides a list of all printer messages, explains what they mean, and tells you how to clear the messages.

The following table lists the messages in alphanumerical order. You can also locate a message using the index.

Message	Action
Activating Menu Changes	Wait for the message to clear.
Busy	Wait for the message to clear, or cancel the print job.
Cancel not available	Wait for the message to clear.
Cancelling	Wait for the message to clear.
Change <src> <Custom Type Name>	<ul style="list-style-type: none"> • If you have changed the media, press ▼ until ✓ Continue appears, and then press ✓. • To print on media currently in the printer, press ▼ until ✓ Continue appears, and then press ✓. • Change the print media orientation. • Cancel the current job.
Change <src> <Custom Type Name> <orientation>	
Change <src> <Custom String>	
Change <src> <Custom String> <orientation>	
Change <src> <size>	
Change <src> <size> <orientation>	
Change <src> <type> <size>	
Change <src> <type> <size> <orientation>	
Check <src> guides	
Clearing job accounting statistics	Wait for the message to clear.
Close cover <x>	Close the specified cover to clear the message.
Close door <x>	Close the specified door to clear the message.
Close surface H	Close the horizontal transport unit (HTU) to clear the message.
Copies	Enter the desired number of copies.
Defragmenting Flash DO NOT POWER OFF	<p>Warning: Do not turn the printer off while this message is displayed.</p> Wait for the message to clear.
Delete	<ul style="list-style-type: none"> • To delete the specified job, press ▼ until ✓ Continue appears, and then press ✓. • Press ✖ to cancel the operation.

Understanding printer messages

Message	Action
Delete all	<ul style="list-style-type: none"> To delete all held jobs, press ▼ until ✓ Continue appears, and then press ✓. Press ✕ to cancel the operation.
Delete all confidential jobs	<ul style="list-style-type: none"> To delete all confidential jobs, press ▼ until ✓ Continue appears, and then press ✓. Press ✕ to cancel the operation.
Deleting	Wait for the message to clear.
Disabling DLEs	Wait for the message to clear.
Disabling Menus	Wait for the message to clear. Note: While the menus are disabled, you cannot change the printer settings from the operator panel.
Disk corrupted	The printer has attempted a disk recovery process, and cannot repair the disk. <ul style="list-style-type: none"> To reformat the disk and delete all files currently stored on the disk, press ▼ until ✓ Continue appears, and then press ✓. To clear the message without reformatting the disk, press ▼ until ✓ Do not reformat appears, and then press ✓.
Disk Recovery x/5 yyy%	Warning: Do not turn the printer off while this message is displayed. The printer is attempting to recover the hard disk. Disk recovery takes place in five phases; the operator panel displays the percent complete of the current phase. Wait for the message to clear.
Empty hole punch box	<ul style="list-style-type: none"> Empty the hole punch box, and if necessary, reset the hole punch counter. To clear the message and print without using the hole punch feature, press ▼ until ✓ Continue appears, and then press ✓.
Enabling Menus	Wait for the message to clear.
Encrypting Disk yyy% DO NOT POWER OFF	Warning: Do not turn the printer off while this message is displayed. The printer is encrypting the hard disk. The percent complete is displayed. Wait for the message to clear.
Enter PIN	Enter the PIN you identified in the driver when you sent the confidential job to the printer.
Enter PIN to lock	Enter the correct pin number to lock the operator panel and prevent menu changes.
Error printing from USB drive	Wait for the message to clear.
Error reading USB drive	Wait for the message to clear.
Flushing buffer	Wait for the message to clear.
Formatting Disk yyy% DO NOT POWER OFF	Warning: Do not turn the printer off while this message is displayed. The printer is formatting the hard disk. The percent complete is displayed. Wait for the message to clear.
Formatting Flash DO NOT POWER OFF	Warning: Do not turn the printer off while this message is displayed. Wait for the message to clear.
Insert print cartridge	Insert the print cartridge to clear the message.
Insert Tray <x>	Insert the specified tray into the printer.
Insert hole punch box	<ul style="list-style-type: none"> Install the hole punch box. To clear the message and print without using the hole punch feature, press ▼ until ✓ Continue appears, and then press ✓.

Understanding printer messages

Message	Action
Install bin <x>	<ul style="list-style-type: none"> Turn the printer off, unplug the power cord from the wall outlet, install the specified bin, replug the power cord, and restart the printer. Cancel the current job.
Internal System Error Reload Bookmarks	<ul style="list-style-type: none"> Reload the Bookmarks. To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ⓧ.
Internal System Error, Reload Security Certificates	<ul style="list-style-type: none"> Reload the Security Certificates. To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ⓧ.
Invalid Network Code	Download valid code to the internal print server. Note: You can download network code while this message is displayed.
Invalid Engine Code	Download valid engine code to the printer. Note: You can download engine code while this message is displayed.
Invalid PIN	Enter the correct PIN.
Load manual feeder with <Custom Type>	<ul style="list-style-type: none"> Load the specified paper in the manual feed tray or multipurpose feeder. To ignore the manual feed request and print on paper already installed in one of the input sources, press ▼ until ✓ Continue appears, and then press ⓧ. If the printer finds a tray that has paper of the correct type and size, it feeds paper from that tray. If the printer cannot find a tray with the correct paper type and size, it prints on whatever paper is installed in the default input source. <ul style="list-style-type: none"> Cancel the current job.
Load manual feeder with <Custom String>	
Load manual feeder with <size>	
Load manual feeder with <size> <type>	
Load <src> with <Custom Type Name>	
Load <src> with <Custom String>	<ul style="list-style-type: none"> Load the input source with the correct type and size media. Cancel the current job.
Load <src> <size>	
Load <src> <type> <size>	
Load Staples	<ul style="list-style-type: none"> Install a new staple cartridge in the stapler. To clear the message and print without stapling, press ▼ until ✓ Continue appears, and then press ⓧ. Cancel the current job.
Maintenance	Replace the maintenance items and, if necessary, reset the printer maintenance counter.
Menus are Disabled	The printer menus are disabled. You cannot change the printer settings from the operator panel. Note: You can still cancel a job, print a confidential job, or print a held job. <ul style="list-style-type: none"> Contact your system support person.
Network	A network interface is the active communication link.
Network <x>	
Network <x>, <y>	A network interface is the active communication link, where <x> represents the active communication link, and <y> represents the channel.
No held jobs	Wait for the message to clear.

Understanding printer messages

Message	Action
No jobs found	<p>Note: The four-digit personal identification number (PIN) you entered is not associated with any confidential print job.</p> <ul style="list-style-type: none"> To enter another PIN, press ▼ until ✓ Try again appears, and then press ✓. To exit the Enter PIN screen, press ▼ until ✓ Cancel appears, and then press ✓.
No jobs to cancel	Wait for the message to clear.
No recognized file types	<p>Wait for the message to clear.</p> <p>Note: The only supported file type is PDF.</p>
Parallel	A parallel interface is the active communication link.
Parallel <x>	
Port disabled Remove USB drive	Wait for the message to clear.
Power Saver	<ul style="list-style-type: none"> Send a job to print. Press ✓ to warm the printer to normal operating temperature and display the Ready message.
Printer locked, enter PIN to unlock	<p>The operator panel has been locked.</p> <p>Enter the correct PIN number.</p>
Printing	Wait for the message to clear.
Printing from USB drive DO NOT REMOVE	<p>Warning: Do not turn the printer off or remove the USB drive while this message is displayed.</p> <p>Wait for the message to clear.</p>
Printer busy Continue Quit	<ul style="list-style-type: none"> To read the information from the USB drive, press ▼ until ✓ Continue appears, and then press ✓. To cancel the information retrieval process, press ▼ until ✓ Quit appears, and then press ✓.
Programming System Code	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>Wait for the message to clear and the printer to reset.</p>
Programming Flash	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>Wait for the message to clear.</p>
Programming Disk	<p>Warning: Do not turn the printer off while this message is displayed.</p> <p>Wait for the message to clear.</p>
Reading USB drive DO NOT REMOVE	Wait for the message to clear.
Ready	Send a job to print.
Remote Management Active DO NOT POWER OFF	<p>The printer settings are being configured, and the printer was taken offline to ensure it is not currently printing and processing jobs.</p> <p>Wait for the message to clear.</p>
Remove paper from bin <x>	Remove the stack of paper from the specified bin(s).
Remove paper from all bins	Remove the paper from all output bins.
Remove paper from <linked set bin name>	<p>The printer automatically senses media removal and resumes printing.</p> <p>If removing the media does not clear the message, press ▼ until ✓ Continue appears, and then press ✓.</p>
Remove paper from standard output bin	Remove the paper from the standard bin.

Understanding printer messages

Message	Action
Requested Env Not Supported	This message occurs when the finisher is attached and an envelope size other than B5 and C5. See the finisher <i>User Guide</i> for instructions to print on other envelopes.
Resetting Active Bin	Wait for the message to clear.
Resetting the Printer	Wait for the message to clear.
Restore Held Jobs	<ul style="list-style-type: none"> • To restore all Print and Hold jobs on the hard disk, press ▼ until ✓ Continue appears, and then press ✓. • To delete Print and Hold jobs, press ▼ until ✓ Do not restore appears, and then press ✓.
Restoring Factory Defaults	<p>Wait for the message to clear.</p> <p>Note: When factory default settings are restored:</p> <ul style="list-style-type: none"> • All downloaded resources (fonts, macros, symbol sets) in the printer memory are deleted. • All menu settings return to the factory default setting <i>except</i>: <ul style="list-style-type: none"> – The Display Language setting in the Setup Menu. – All settings in the Parallel Menu, Serial Menu, Network Menu, Infrared Menu, LocalTalk Menu, USB Menu, and Fax Menu.
Restoring held job(s) x/y	<ul style="list-style-type: none"> • Wait for the message to clear. • To delete unrestored Print and Hold jobs, press ▼ until ✓ Quit restoring appears, and then press ✓. <p>Note: <i>x</i> represents the number of the job being restored, and <i>y</i> represents the total number of jobs to be restored.</p>
Serial <x>	A serial interface is the active communication link.
Some held jobs were lost	<ul style="list-style-type: none"> • To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. <p>The printer frees memory by deleting the oldest held job and continues deleting held jobs until there is enough printer memory to process the job.</p> <ul style="list-style-type: none"> • Cancel the current job.
Staples Empty or Misfed	<ul style="list-style-type: none"> • Check the staple cartridge for a staple jam. • Install a new staple cartridge. • To clear the message and continue printing without stapling, press ▼ until ✓ Continue appears, and then press ✓. • Cancel the current job.
Standard Bin Full	Remove the stack of paper from the bin to clear the message.
Submitting selection	Wait for the message to clear.
Toner Empty	<ul style="list-style-type: none"> • Replace the toner cartridge.
Toner Low	<ul style="list-style-type: none"> • Replace the toner cartridge. • Press ✓ to clear the message and continue printing.
Tray <x> Empty	Load paper in the tray to clear the message.
Tray <x> Low	Add paper to the tray to clear the message.
Tray <x> Missing	Insert the tray into the printer.
USB	The printer is processing data through the specified USB port.
USB <x>	
USB device unsupported	Remove the unsupported device to clear the message.

Understanding printer messages

Message	Action
USB drive removed	<ul style="list-style-type: none"> • Wait for the message to clear. • Insert the USB drive.
View supplies	Displays the current level of all printer supplies.
Waiting	<p>The printer has received a page of data to print, but is waiting for an End of Job command, a Form Feed command, or additional data.</p> <ul style="list-style-type: none"> • Press  to print the contents of the buffer. • Cancel the current job.
1565 Emul Error Load Emul Option	<p>The printer automatically clears the message in 30 seconds, and then disables the download emulator on the firmware card.</p> <p>Download the correct download emulator version from the Lexmark Web site.</p>
31 Replace defective or missing toner cartridge	Insert or replace the toner cartridge.
34 Incorrect media, check <src> guides	<ul style="list-style-type: none"> • Load the appropriate media in the selected source. • To clear the message and print the job using a different paper source, press  until  Continue appears, and then press .
35 Insufficient memory to support Resource Save feature	<ul style="list-style-type: none"> • To disable Resource Save and continue printing, press  until  Continue appears, and then press . • To enable Resource Save after you get this message: <ul style="list-style-type: none"> – Make sure the link buffers are set to Auto, then exit the menus to activate the link buffer changes. – When Ready is displayed, enable Resource Save. • Install additional memory.
37 Insufficient memory to collate job	<ul style="list-style-type: none"> • To print the portion of the job already stored and begin collating the rest of the job, press  until  Continue appears, and then press . • Cancel the current job.
37 Insufficient memory for Flash Memory Defragment operation	<ul style="list-style-type: none"> • To stop the defragment operation and continue printing, press  until  Continue appears, and then press . • Delete fonts, macros, and other data in printer memory. • Install additional printer memory.
37 Insufficient memory, some held jobs were lost	<p>The printer was unable to restore some or all of the confidential or held jobs on the hard disk.</p> <p>To clear the message, press  until  Continue appears, and then press .</p>
38 Memory Full	<ul style="list-style-type: none"> • To clear the message and continue printing, press  until  Continue appears, and then press . • The job may not print correctly. • Cancel the current job. • Install additional printer memory.
39 Page is too complex to print	<ul style="list-style-type: none"> • To clear the message and continue printing, press  until  Continue appears, and then press . • The job may not print correctly. • Cancel the current job. • Install additional printer memory.

Understanding printer messages

Message	Action
50 PPDS font error	<ul style="list-style-type: none"> To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. The job may not print correctly. Cancel the current job.
51 Defective flash detected	<p>To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓.</p> <p>You must install different flash memory before you can download any resources to flash.</p>
52 Not enough free space in flash memory for resources	<ul style="list-style-type: none"> To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. Downloaded fonts and macros not previously stored in flash memory are deleted. Delete fonts, macros, and other data stored on the flash memory. Install a larger capacity flash memory card.
53 Unformatted flash detected	<p>To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓.</p> <p>You must format the flash memory before you can store any resources on it. If the error message remains, the flash memory may be defective and require replacing.</p>
54 Serial option <x> error	<ul style="list-style-type: none"> Make sure the serial link is set up correctly, and you are using the appropriate cable. Make sure the serial interface parameters (protocol, baud, parity, and data bits) are set correctly on the printer and host computer. To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. The job may not print correctly. Turn the printer off and then on to reset the printer.
54 Network <x> software error	<ul style="list-style-type: none"> To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. The job may not print correctly. Program new firmware for the network interface. Reset the printer.
54 Standard network software error	
55 Unsupported option in slot <x>	<ol style="list-style-type: none"> Turn the printer off. Unplug the power cord from the wall outlet. Remove the unsupported option. Plug in the power cord Turn the printer on.
56 Parallel port <x> disabled	<ul style="list-style-type: none"> To clear the message, press ▼ until ✓ Continue appears, and then press ✓. The printer discards any data received through the parallel port. Make sure the Parallel Buffer menu item is not set to Disabled.
56 Standard parallel port disabled	
56 Serial port <x> disabled	<ul style="list-style-type: none"> To clear the message, press ▼ until ✓ Continue appears, and then press ✓. The printer discards any data received through the serial port. Make sure the Serial Buffer menu item is not set to Disabled.
56 USB port <x> disabled	<ul style="list-style-type: none"> To clear the message, press ▼ until ✓ Continue appears, and then press ✓. The printer discards any data received through the USB port. Make sure the USB Buffer menu item is not set to Disabled.

Understanding printer messages


Message	Action
56 Standard USB port disabled	<ul style="list-style-type: none"> • To clear the message, press ▼ until ✓ Continue appears, and then press ✓. • The printer discards any data received through the USB port. • Make sure the USB Buffer menu item is not set to Disabled.
58 Too many flash options installed	<ol style="list-style-type: none"> 1 Turn off and unplug the printer. 2 Remove the excess flash memory. 3 Plug in the printer, and turn it on.
61 Remove defective disk	<ul style="list-style-type: none"> • To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Install a different hard disk before you perform any operations that require a hard disk.
62 Disk full	<ul style="list-style-type: none"> • To clear the message and continue processing, press ▼ until ✓ Continue appears, and then press ✓. • Any information not previously stored on the hard disk is deleted. • Delete fonts, macros, and other data stored on the hard disk. • Install a larger hard disk.
63 Unformatted disk	<ul style="list-style-type: none"> • To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Format the disk. <p>If the error message remains, the hard disk may be defective and require replacing.</p>
64 Unsupported disk format	<ul style="list-style-type: none"> • To clear the message and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Format the disk. <p>If the error message remains, the hard disk may be defective and require replacing.</p>
80 Scheduled maintenance advised	<ul style="list-style-type: none"> • To clear the message, and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Replace the maintenance items and if necessary, reset the printer maintenance counter.
84 Insert PC unit	Insert the photoconductor unit.
84 PC Unit life warning	<ul style="list-style-type: none"> • To clear the message, and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Replace the photoconductor unit.
84 Replace PC unit	<ul style="list-style-type: none"> • To clear the message, and continue printing, press ▼ until ✓ Continue appears, and then press ✓. • Replace the photoconductor unit.
84 PC unit abnormal	<ul style="list-style-type: none"> • Replace the photoconductor unit.
88 Toner is low	<ul style="list-style-type: none"> • Replace the toner cartridge. • To clear the message, and continue printing, press ▼ until ✓ Continue appears, and then press ✓.
88 Replace toner	<ul style="list-style-type: none"> • Replace the toner cartridge. • To clear the message, and continue printing, press ▼ until ✓ Continue appears, and then press ✓.
200.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press ✓ to resume printing.

Understanding printer messages

Message	Action
201.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
202.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
203.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
230.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
231.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
241.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
242.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
243.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
244.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
245.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
250.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
280.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
281.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
282 Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
283 Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.
284 Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press Ⓢ to resume printing.

Understanding printer messages

Message	Action
285 Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press ⓧ to resume printing.
286 Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press ⓧ to resume printing.
287.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press ⓧ to resume printing.
288.yy Paper jam	<ol style="list-style-type: none"> 1 Clear the paper path. 2 After clearing the paper path, press ▼ until ✓ Continue appears, and then press ⓧ to resume printing.
289 Staple error	<ol style="list-style-type: none"> 1 Remove the paper from the bin. 2 Clear the stapler. 3 After clearing the stapler, press ▼ until ✓ Continue appears, and then press ⓧ to resume printing.
900-999 Service <message>	<ol style="list-style-type: none"> 1 Turn the printer off 2 Unplug the power cord from the wall. 3 Check all cable connections. 4 Plug in the power cord. 5 Turn the printer back on. <p>If the service message recurs, call for service, and report the message number and description of the problem.</p>

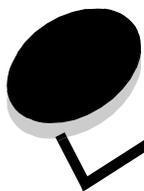

Index

Numerics

1565 Emul Error Load Emul Option 44
200.yy Paper jam 46
201.yy Paper jam 47
202.yy Paper jam 47
203.yy Paper jam 47
230.yy Paper jam 47
231.yy Paper jam 47
241.yy Paper jam 47
242.yy Paper jam 47
243.yy Paper jam 47
244.yy Paper jam 47
245.yy Paper jam 47
250.yy Paper jam 47
280.yy Paper jam 47
281.yy Paper jam 47
282 Paper jam 47
283 Paper jam 47
284 Paper jam 47
285 Paper jam 48
286 Paper jam 48
287 Paper jam 48
288 Paper jam 48
289.yy Staple error, check area G 48
31 Replace defective or missing toner cartridge 44
34 Incorrect Media 44
37 Insufficient memory for Flash Memory Defragment operation 44
37 Insufficient memory to collate job 44
37 Insufficient memory, some held jobs were lost 44
38 Memory Full 44
39 Page is too complex to print 44
51 Defective flash detected 45
52 Not enough free space in flash memory for resources 45
53 Unformatted flash detected 45
54 Network software error 45
54 Serial option error 45
54 Standard network software error 45
55 Unsupported option in slot 45
56 Parallel port disabled 45
56 Serial port disabled 45
56 Standard parallel port disabled 45
56 Standard USB port disabled 46
56 USB port disabled 45
58 Too many flash options installed 46
61 Remove defective disk 46
62 Disk full 46

63 Unformatted disk 46
64 Unsupported disk format 46
80 Scheduled maintenance 46
84 Insert PC unit 46
84 PC unit abnormal 46
84 PC Unit life warning 46
84 Replace PC unit 46
88 Replace toner 46
88 Toner is low 46
900–999 Service 48

A

accounting statistics 22
Activate, AppleTalk 37
Activate, LexLink 37
Activate, netware 36
Activating Menu Changes 39
Advanced Status, parallel 33
Alarms 16
Annotations 23
AppleTalk 37
Assign Type/Bin 12
Auto Fit 28
automatic size sensing 7

B

Back button 5
Backgrounds, HTML 27
Baud 35
bins
 assigning 12
 configuring 12
 output 12
Blank Pages 19
Brightness 21
Busy 39
button
 back 5
 menu 5
 stop 5

C

Cancel not available 39
Cancelling Job 39
Change 39
Change src, Custom Type Name, load orientation 39
Check guides 39
Clearing job accounting statistics 39

Index

Close door 39
Close surface H 39
Collation, enabling 19
Configure Bins 12
Configure MP 9
Connection Guide, help 38
Contrast 21
Copies 39
Copies, specifying number 19
Coverage Estimator 22
Custom Paper Type 11
custom paper type 11

D

Data Bits 35
Default Source 7
defaults, factory 19
Defragment Flash 22
Defragmenting Flash 39
Delete 39
Delete all 40
Delete all confidential jobs 40
Deleting 40
Device Statistics 13
diagram, menu 4
directory printing 14
Disabling DLEs 40
Disabling Menus 40
Disk corrupted 40
disk format 22
Disk Recovery x/5 yyy% 40
Display Language 15
display panel 6
Download Target 18
duplex binding 19
duplex enabling 19

E

Empty hole punch box 40
Emulation Settings, PCL 25
ENA Address, USB 32
ENA Gateway, USB 32
ENA Netmask, USB 32
Enabling Menus 40
Encrypting Disk yyy% 40
Enter PIN 40
Enter PIN to lock 40
Error printing from USB drive 40
Error reading USB drive 40
Ethernet 802.2, netware 36
Ethernet 802.3, netware 36
Ethernet SNAP, netware 36
Ethernet Type II, netware 36

F

Factory Defaults 19, 22

Feed Direction 12
Finishing Menu 19
flash defragmenting 22
flash formatting 22
Flushing buffer 40
Font Name, HTML 27
Font Name, PCL 24
font printing 14
Font Priority 23
Font Size, HTML 27
Font Source, PCL 24
Format Disk 22
Format Flash 22
Formatting Disk 40
Formatting Disk yyy% 40
Formatting Flash 40

H

held jobs, removal 22
help
 Connection Guide 38
 Information Guide 38
 Media Guide 38
 Menu Map 38
 Moving Guide 38
 Print All 38
 Print Defects 38
 Print Quality 38
 Supplies Guide 38
Help Menu 38
help, Printing Guide 38
Hex Trace 22
hole punch enabling 21
Hole Punch Mode 21
Honor DSR 36
Honor Init, parallel 33
HTML backgrounds 27
HTML font name 27
HTML font size 27
HTML margins 27
HTML Menu 27
HTML orientation 27
HTML scaling 27

I

Image Menu 28
image orientation 28
image scaling 28
Information Guide, help 38
Insert hole punch box 40
Insert print cartridge 40
Insert Tray <x> 40
Install bin 41
Insufficient memory to support Resource Save feature 44
Internal System Error Reload Bookmarks 41
Internal System Error, Reload Security Certificates 41

Invalid Engine Code 41
Invalid Network Code 41
Invalid PIN 41
Invert 28
IPv6 29

J

Job Accounting 18
job accounting 18
job accounting statistics 22
Job Buffering, network 30
Job Buffering, parallel 33
Job Buffering, serial 35
Job Buffering, USB 32
Job Expiration 28

L

language, display 15
language, printer 18
LCD Brightness 23
LCD Contrast 23
LexLink 37
Load Manual <Custom String> 41
Load Manual <Custom Type> 41
Load Manual <size> 41
Load Manual <size> <type> 41
Load Staples 41
Load, src with, Custom String 41
Load, src with, Custom Type Name 41
Load, src, size 41
Load, src, type, size 41
loading paper 11

M

Mac Binary PS, network 31
Mac Binary PS, parallel 34
Mac Binary PS, USB 32
Maintenance 41
Manual Envelope Size 9
Manual Envelope Type 9
Manual Paper Size 9
Manual Paper Type 9
Margin, HTML 27
Max Invalid PIN 28
Media Guide, help 38
Menu button 5
menu diagram 4
Menu Map, help 38
Menu Settings Page 13
Menus are Disabled 41
Moving Guide, help 38
MP Feeder Size 8
MP Feeder Type 8
Multipage Border 21
Multipage Order 20
Multipage Print 20

Multipage View 21

N

Netware Menu 36
Netware Setup Page 13
Network <x> 41
Network Buffer 30
Network interface 41
network option 30
Network Ports 29
Network Setup Page 13
No held jobs 41
No jobs found 42
No jobs to cancel 42
No recognized file types 42
NPA Mode, network 30
NPA Mode, parallel 33
NPA Mode, serial 34
NPA Mode, USB 31
NSQ/GSQ mode, netware 36
numeric pad 6

O

Offset Pages 21
operator panel 5
Orientation, HTML 27
Orientation, Image Menu 28
Output Bin 12

P

Packet Burst, netware 36
pad, numeric 6
panel, display 6
panel, operator 5
Paper Loading 11
paper menu 7
Paper Size 7
Paper Texture 10
Paper Type 7
paper type, custom 11
Parallel Buffer 33
Parallel interface 42
Parallel Menu 32
Parallel Mode 2 34
parallel option 32
Parity 36
PCL emulation settings 25
PCL font name 24
PCL font source 24
PCL Menu 24
PCL SmartSwitch, network 30
PCL SmartSwitch, parallel 32
PCL SmartSwitch, serial 34
PCL SmartSwitch, USB 31
PCL symbol set 24
PCL tray renumber 26

Index

- PDF Menu 23
- Port disabled Remove USB drive 42
- Portrait Height 12
- Portrait Width 11
- PostScript Menu 23
- Power Saver 16, 42
- Print All, help 38
- Print Area 18
- Print Defects, help 38
- Print Directory 14
- Print Fonts 14
- Print PS Error 23
- Print Quality help 38
- Print Recovery 17
- Print Resolution 21
- Printer busy 42
- Printer Language 18
- Printer locked, enter PIN to unlock 42
- Printing 42
 - printing annotations 23
 - Printing from USB drive 42
 - Printing Guide, help 38
- Profiles List 13
- Programming Disk 42
- Programming Flash 42
- Programming System Code 42
- Protocol, parallel 33
- PS SmartSwitch, network 30
- PS SmartSwitch, parallel 33
- PS SmartSwitch, serial 34
- PS SmartSwitch, USB 31

Q

- Quality Menu 21

R

- Reading USB drive 42
- Ready 42
- Remote Management Active 42
- Remove Held Jobs 22
- Remove paper from all bins 42
- Remove paper from bin 42
- Remove paper from standard output bin 42
- Reports 13
- Resetting Active Bin 43
- Resetting the Printer 43
- Resource Save 18
- Restore Held Jobs 43
- restoring defaults 19
- Restoring Factory Defaults 43
- Restoring Held Job xxx/yyyy 43
- Robust XON 35

S

- saving power 16
- Scale to Fit 23

- Scale, HTML 27
- Scaling, Image Menu 28
- Security 28
- Separator Sheets 20
- Separator Source 20
- Serial <x> 43
- Serial and Serial Option Ports 34
- Serial Buffer 35
- Serial Menu 34
- Serial Protocol 35
- Set Zone, AppleTalk 37
- settings 15
- Setup Menu 15
 - setup netware 13
- Some held jobs were lost 43
- Standard Bin Full 43
- standard network 30
- Staple Job 21
- Staples Empty or Misfed 43
- statistics 18
 - statistics, job accounting 22
- Stop button 5
- Submitting selection 43
- Substitute Size 9
- Supplies Guide, help 38
- Symbol Set, PCL 24

T

- TCP/IP 29
- Textured Paper 10
- Timeouts 17
- Toner Darkness 21
- Toner Empty 43
- Toner Low 43
- Tray <x> Empty 43
- Tray <x> Low 43
- Tray <x> Missing 43
- Tray <x> Size 7
- Tray <x> Type 8
- Tray Renumber, PCL 26

U

- Units of Measure 11
- Universal Paper Size 11
- USB 43
 - USB <x> 43
 - USB Buffer 32
 - USB drive removed 44
- Utilities Menu 22

V

- View Address, AppleTalk 37
- View Login Name, netware 36
- View Name, AppleTalk 37
- View Network Number, netware 36
- View Nickname, LexLink 37

Index

View Print Mode, netware 36

View supplies 44

W

Waiting 44